 
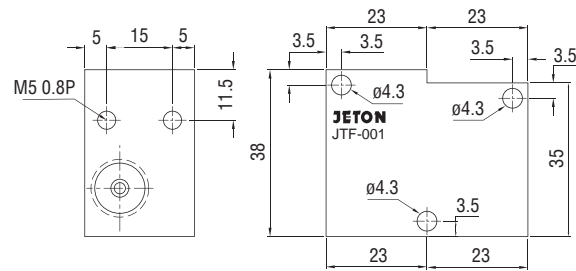 


# SPRAYING DEVICE

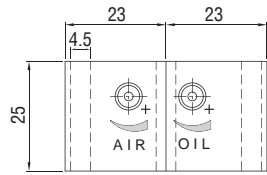


## Spraying Device

### JTF-001 SPRAYING DEVICE

- ▶ Aluminum Base 1 set
- ▶ 1/4" Adjustable Coolant Hoses 1 piece
- ▶ A Spray Nozzle 1 piece

- ▶ Applied to cool the micro-cutting under the high-speed.
- ▶ Two inlet ports, one for oil, and the other one for air.
- ▶ Adjust bolt to adjust the oil and air.
- ▶ The pressure exportation oil and air.

**Recommended Pressures:**  
 Atmospheric pressure: 0.5~5 kg/cm<sup>2</sup>  
 Hydraulic pressure: 0.5~2 kg/cm<sup>2</sup>

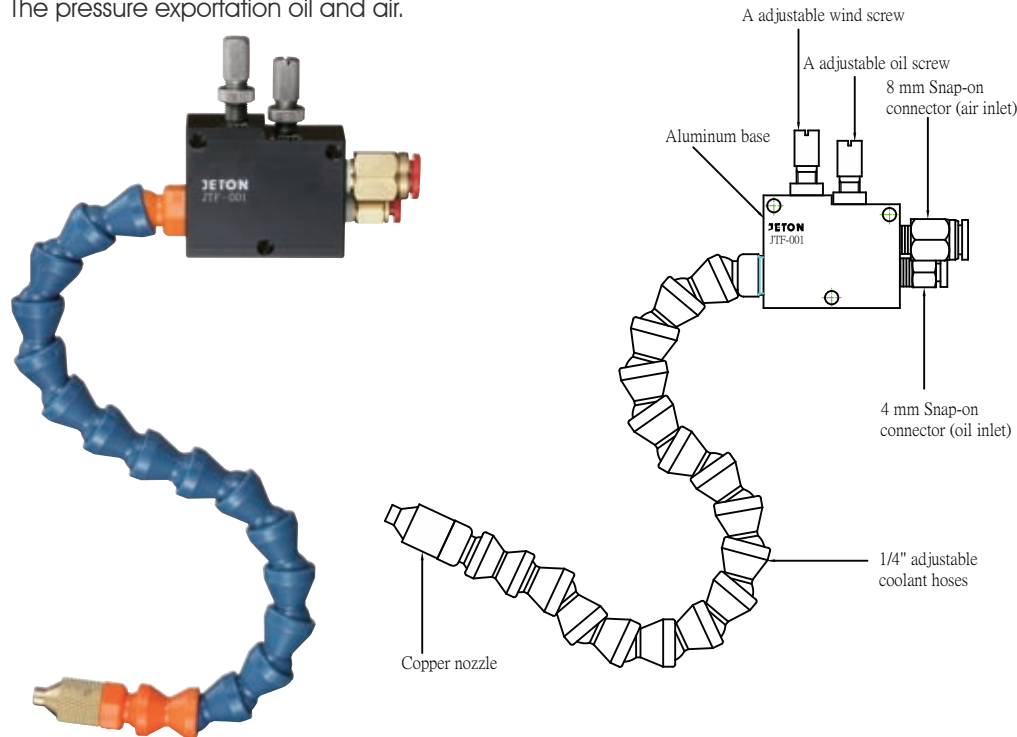



## Spraying Device

### JTF-002 SPRAYING DEVICE

- ▶ Aluminum Base 1 set
- ▶ 1/4" Adjustable Coolant Hoses 1 piece
- ▶ A Spray Nozzle 1 piece

- ▶ Applied to cool the micro-cutting under the high-speed.
- ▶ Two inlet ports, one for oil, and the other one for air.
- ▶ Adjust bolt to adjust the oil and air.
- ▶ The pressure exportation air arouses the oil into.

**Recommended Pressures:**  
 Atmospheric pressure: 3.5~5 kg/cm<sup>2</sup>  
 Hydraulic pressure: 0

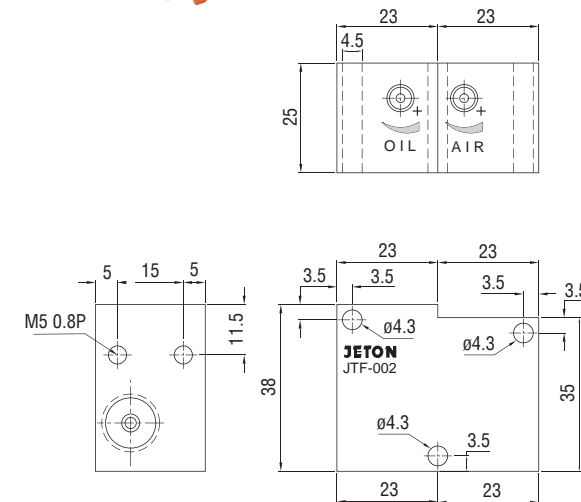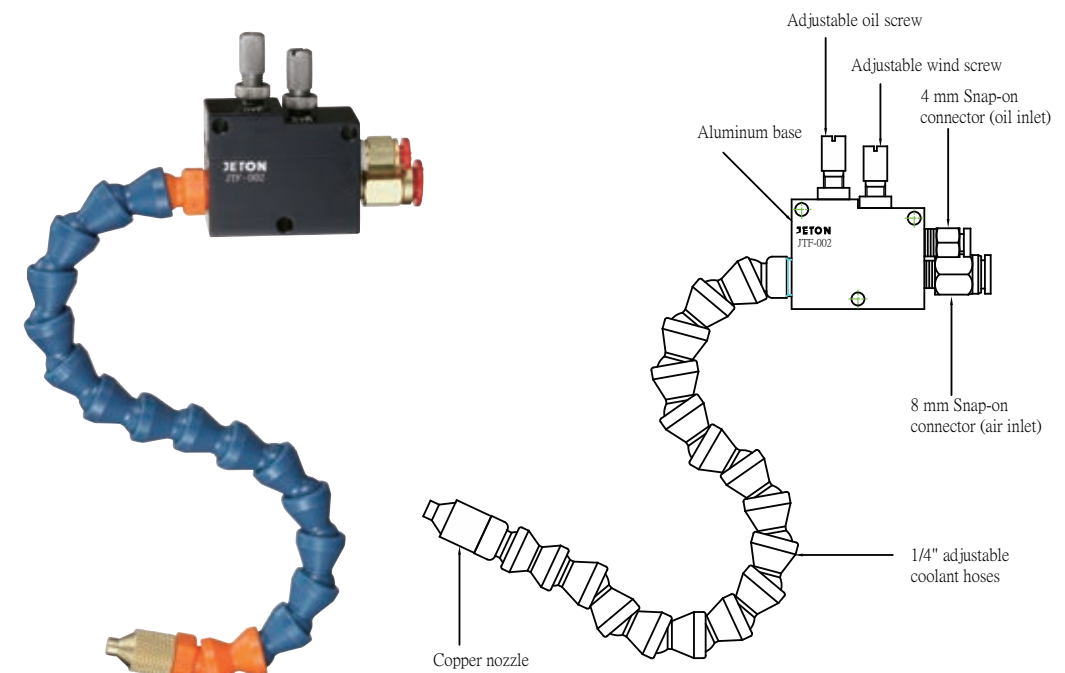

### High Pressure Adjustable Nozzle Spraying Device

